



LabJack

1

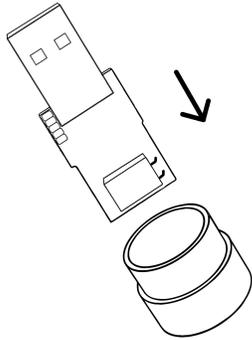

Insert electronics into base.
Keep upright.
Hold PCB by edges.

2

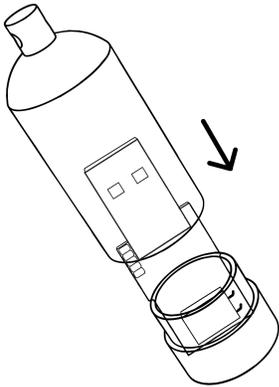

Screw on the enclosure top.
Keep upright until secure.



BAD: May cause damage to
humidity sensor.